

# ACCUSPLIT® AX725BKC

## OPERATING INSTRUCTIONS

The AX725BKC comes with Traceable Accuracy Calibration.  
Please see enclosed documentation for more details.

### BASIC STOPWATCH OPERATIONS

**Twin Button Feature:** The Left and Right buttons on new ACCUSPLIT stopwatches operate interchangeably, so both are labeled “A” for these instructions.

#### Event

- A – Start
- A – Stop (Display shows “SPLIT”)
- A (2sec) – Reset

#### Dual Split Memory with Split Counter

- A – Start (Shows Running DUAL Time)
- A – Split\* (Top shows CUM 1, Bottom shows LAP 1)
- A – Split\* (shows CUM 2, Bottom shows LAP 2)
- A – Split\* (Top shows CUM 3, Bottom shows LAP 3)
- A – Split\* (Top shows CUM 4, Bottom shows LAP 4)
- A (2sec) – Reset

\*Split Counter always shows Current Split  
Push C to return to Running Time

#### Memory Review (before Resetting)

- C (2sec) – Review\* (Shows last DUAL Split)
  - C – Review (Shows next DUAL Split, in reverse order)
  - C (2sec) – Exit Memory Review to last DUAL Split.
- \*Reviews at any time in reverse numerical order.



### BATTERY CHANGING

If the display becomes dim or goes blank, you can replace the battery using “X3V” case battery changing instructions posted at [www.accumplit.com/support](http://www.accumplit.com/support). The watch uses a five-year CR2032 Lithium battery.

#### Master Reset

Remove battery as shown above. Wait 5 seconds and reinstall.

#### NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check  
<http://support.ACCUSPLIT.com>